

Room Design for High Performance Electron Microscopy

David A. Muller^{1,2}, Earl Kirkland¹, Malcom G. Thomas², John L. Grazul², Lena Fitting¹,
Matthew Weyland¹

¹ School of Applied and Engineering Physics, Cornell University, Ithaca, NY 14853.

² Cornell Center for Materials Research, Cornell University, Ithaca, NY 14853.

Abstract

Aberration correctors correct aberrations, not instabilities. Rather, as spatial resolution improves, a microscope's sensitivity to room environment becomes more noticeable, not less. Room design is now an essential part of the microscope installation process. Previously ignorable annoyances like computer fans, desk lamps and that chiller in the service corridor now may become the limiting factors in the microscopes performance. We discuss methods to quantitatively characterize the instrument's response to magnetic, mechanical, acoustical and thermal disturbances and thus predict the limits that the environment places on imaging and spectroscopy.

Introduction

As electron microscopes have grown in size and sensitivity so have the requirements for the laboratories that house them. While there is considerable expertise and knowledge in the construction industry in building quiet rooms and many of the newer microscope facilities have taken advantage of this knowledge[1-5], the precise impact of the inevitable residual noise sources is less clearly understood (although there are some exceptions like AC fields and air pressure[6]). In general one builds the best room one can for the money available, and then hopes. Costs range from ten thousand dollars for simple room refits to millions of dollars for new national facilities and people have generally been willing to document best practices and lessons learned[2, 3, 6, 7]. The basic shape of a side-entry transmission electron microscope is still very similar to the designs of the early 1970's and much of the characterization of the mechanical and electromagnetic response dates back to that era[5]. Manufacturers had to re-evaluate their environmental specifications with the introduction of field emission sources in the 1980's but until very recently based their performance specifications on recording a single TEM image and not STEM (scanning transmission electron microscopy) operation or TEM operations requiring multiple, correlated images or longer acquisition times. STEM images, tomographic series, energy filtering, spectroscopy and exit wave reconstructions take longer to acquire than conventional TEM images and are

consequently more sensitive to very low frequency noise sources. Issues like air pressure changes from doors opening in air-conditioned buildings become very noticeable in STEM[6] and energy loss spectroscopy can be affected by something as simple as the operator not being able to sit still on a wheeled chair.

We have previously discussed strategies for locating and reducing sources of electromagnetic interference (EMI), including common wiring mistakes that produce ground currents [6]. Vibration isolation has been extensively documented[5, 8] and designs range from slab-on-grade[1, 3] to suspended structures[4]. For most room environment problems however, the key issue is location. It is very difficult to build a quiet room next to a main road, machine shop or MBE lab with cryo-pumps. On the other hand if the microscope is to be located in a new building as far from the street and heavy equipment as possible, very modest designs can yield very high performances. For instance we found the slab-on-grade construction for our new microscope suite to produce floor vibrations so low (a factor of 3 and more below the ultra-sensitive NIST-A/A-1 standards[8, 9]), the microscope manufacturer's survey team initially thought their accelerometer was broken. The slab itself was not especially effective in attenuating vibrations, but rather there was little in the neighborhood to produce vibrations.

Air handling systems seem to be one area in which designers are the weakest. In clean rooms, very precise air temperature control is achieved by having rapid air flow through the space. Needless to say, this strategy is unsuitable for electron microscopy. Unfortunately most companies that build scientific laboratories seem to want to take this high-flow approach or variations involving extremely elaborate hollow ceilings, diffusers or circuits to switch off the air-conditioning when taking images. A simpler approach is to reduce the airflow and add thermal mass to the room with radiant cooling[6, 10]. This is the approach we discuss here as it can often be a relatively cheap retrofit to an existing room.

As most environmental noise sources cannot be eliminated but only reduced, it is worth establishing how sensitive an instrument is, and how much shielding is necessary. Or to put it another way, what happens if you don't meet the manufacturer's room specifications? We hope this paper will prove useful in explaining to architects and administrators the importance and consequences of environmental considerations.

The Impact of AC Magnetic Fields on STEM Imaging

Alternating-current electromagnetic interference (EMI) is one of the usual suspects whenever scan noise is observed in a STEM image. Figure 1 shows the most common symptoms of a small AC noise on the scan coils of a STEM. One of the first challenges is determining when the observed noise is from EMI or coupled through vibrations or acoustics.

The microscope column should effectively shield radio frequency noise from the electron beam, but lower frequencies (1-3000 Hz) are less effectively screened. To separate EMI from other noise sources we deliberately applied a much larger EMI

disturbance than all other noise sources so it could be distinguished and quantified. We have measured the field sensitivity for both our VG-HB501A UHV-STEM and our Tecnai T20 with monochromator. The procedure described below is for the Tecnai, but is similar to the VG measurements.

A large (~ 1m diameter) AC coil was built and placed ~ 1m from the microscope column at the same height as the upper half of the column. The field was measured at the column near the first condenser lens. Field variations at the sample and gun could be 30% less.

Images were recorded with the external AC field on (34 mG peak to peak), and off (0.2 mG p-p). The STEM image scan rate was externally synchronized. Figure 2a shows the test sample used for the measurements before the external AC field was applied. The structure is 5 unit cells of SrTiO₃ (1.96 nm thick) grown on silicon. This marker layer is a useful calibration standard even when atomic resolution is lost due to the external field. Figure 2b shows that when the external field is applied, the synchronization to the external field simply bends the image and the marker layer. Knowing the width of the marker layer, we can measure the peak-to-peak distortion in the presence of the field.

At spot size 9, we found the response was 0.52 Å/mG (Peak-to-peak), and at spot size 11, we found the response was 0.48 Å/mG (Peak-to-peak). These are typical STEM imaging conditions and 0.5 Å/mG can be taken as typical sensitivity factor. In private communications, FEI reported a similar sensitivity for the unmonochromated instrument and our previous experience with the JEOL 2010F suggests a similar order of magnitude sensitivity. The VG sensitivity factor was 1.42 Å/mG. Note that many handheld meters record the r.m.s field, not peak-peak value, in which case the calculated image distortion is also an r.m.s result. To convert from r.m.s to p-p, multiply by ~3 for sine waves.

The standard test image favored by manufacturers in demonstrating ADF-STEM performance is most often the silicon [110] projection. Figure 3 shows simulated ADF-STEM images for different levels of EMI interference assuming a 0.5 Å/mG sensitivity factor. This figure should be useful both in understanding the visual impact of EMI on STEM imaging and also when EMI can be ruled out as a noise source. With external sync off, we would expect “image tearing” of no more than 0.1 Å p-p under normal operation conditions of our microscope (0.2 mG p-p or 0.07 mG r.m.s). Any image distortions larger than this (and originally we did have some) cannot be blamed on EMI, and their source must lie elsewhere. In our case this led us to uncover and fix some scan electronics and acoustic noise problems.

It is not only the scan system that is sensitive to AC fields. Post-column spectrometers show a typical sensitivity of about 1eV/mG. EMI can reduce the energy resolution, especially for monochromated systems. Quasi-DC fields from elevators, metal in movable furniture or passing traffic can shift the energy alignment during EELS mapping, making it very difficult to extract reliable core-level shifts. Only somewhat tongue-in-cheek we had previously calibrated the response to external traffic in terms of engine size[6], but for heavy vehicles it turns out an easier estimate follows from the advice of our local fire department that truck axles typically are designed to support about

20,000 lbs per axle so the weight of the truck can be guessed simply by counting axles. Most of this weight is magnetic and so from measurements of fire engines driven past our field meter, we find that the magnetic field produced is $\mathbf{B}_{\text{truck}} \sim 0.1 \text{ mG/axle}$ at 25 feet and falls off between $1/\text{distance}^2$ to $1/\text{distance}^3$ depending on the whether the truck is near or far.

Magnetic Field Remediation

When it is not practical to eliminate the source of EMI, there are a number of different strategies to screen out the fields at the column. The oldest and most expensive approach is to construct a shielded room made from a high permeability material such as mumetal. Slowly varying magnetic fields are not strongly attenuated. Instead magnetic shielding works by providing a low reluctance path for external fields. Consequently it is only effective if it closes the instrument on all sides. Placing shielding on only 1 wall is not very effective. As a rough rule of thumb, the magnetic field will penetrate roughly 5 times the size of any hole in the shielding. The shielded room also needs to be quite large, as any fields inside the room will also induce image fields in the walls. Further, the walls of a mu-metal shield room need to be very rigid otherwise it is possible to couple acoustic and mechanical vibrations into magnetic fields of the same frequency. The amount of space required to house and service a TEM/STEM makes such rooms rather expensive. Simply choosing a large room (with a high ceiling) for the microscope may be as effective since most fields decay rapidly with distance.

Another approach to shielding is eddy current shielding with a good conductor. Here the fields are attenuated so the shield need not be continuous. Typical costs range from \$10,000 - \$40,000. The thickness of shielding material required is determined by its skin depth (in meters) of,

$$\delta = \sqrt{\frac{2}{\sigma\mu\omega}} \quad -(1).$$

where σ is the conductivity, μ is the magnetic permeability of the material, and ω is the frequency of the incident radiation[11]. An electromagnetic wave incident upon a highly conducting medium is exponentially attenuated over a skin depth. Popular shielding materials are good conductors like Aluminum (Copper is usually too expensive) or high permeability, low loss conductors like transformer core steel. The skin depth of Al is ~ 5 mm at 60 Hz so a 1cm thick Al liner will attenuate external fields by a factor of ~ 7 and 2 cm thick by x 50. The cost effectiveness of conventional and high conductivity Al alloys can be evaluated by noting that the skin depth scales as the square root of resistivity. If only low attenuation factors are required there is not much difference, but small differences in exponentials add up and for high attenuations the required thicknesses are noticeably different. The $1/\sqrt{\omega}$ dependence of the skin depth makes this screening most effective at higher frequencies, and almost completely useless for quasi-DC disturbances (like elevators or nearby trains).

An effective companion method to eddy current shielding is active field cancellation with a wideband (including DC) sensor. AC sensors are more sensitive at higher frequencies, but these should already have been screened out by the eddy current shielding. Active cancellation works best for compensating fields from distant sources (which hopefully elevators and trains are). In the simplest versions, loops of wire are run around the room to produce Helmholtz coils in the x,y and z directions. These can exactly cancel out a field at one point in the room so the location of the feedback sensor is important. For a small room, canceling the field at the gun would have the effect of enhancing the field at the spectrometer. For the same reasons, these active-cancellation systems are not always effective in compensating for nearby or non-uniform sources of fields such as improperly grounded conduits or wiring in the room. More sophisticated versions of the cancellation system can have multiple meshes of coils to provide a more uniform response. In dealing with DC fields, long term sensor drift has to be very small or else a steady image and alignment drift will be observed on the microscope. As a stand-alone system, active field cancellation should not be expected to eliminate all random noise as the microscope column is often more sensitive to low frequency stray fields than the AC sensor of the cancellation unit. For well defined frequencies (e.g. mains) a factor of 20-30 might be typical, but reducing low frequencies and residuals below 1 mG can be difficult.

Characterizing Mechanical and Acoustic Noise Sources

Quoting a single number for the sensitivity of a microscope to mechanical or acoustic noise is often not practical. The noises are less likely than EMI to be at one set frequency and each microscope's resonances where it is particularly sensitive to noise will differ from instrument to instrument. Some general trends are that tall, thin columns will be more likely to sway in the breeze (yes, air movement will do that) than short fat ones; the vibration isolation on most microscopes do a pretty good job of damping out vibrations above 100 Hz or so but can amplify noise at 1-10 Hz depending on their resonance frequency. This can be a problem as many buildings can also have their natural frequencies around 5-10 Hz. If the vibration frequency is above a few hundred Hertz, it is more likely to be coupled acoustically via the sample holder.

Figure 4 illustrates this point. Figure 4a shows the vibration spectrum measured with a Wilcox accelerometer (Spicer Instruments) both on the floor of the room below the microscope column, and on the microscope column at the goniometer. Below 60 Hz there is more noise on the floor than the column, however above 60 Hz, the stage is shaking more than the floor. There are also sharp resonances between 300 and 400 Hz that are different for the floor and stage. This suggests that the mechanical isolation of the microscope is working correctly – and in this case is protecting the floor from being shaken by the column!

The sharp resonances provide an easy fingerprint to isolate the noise source. Figure 4b shows the acoustic spectrum in the room – most of the noise is from the fan in computer controlling the microscope. The fans in the Gatan camera controller were off for this experiment as they are even louder. As the column has a large surface area (and

thanks to the vibration isolation is free to rock) it will move a few microns in response to sounds or air movements – basically any air pressure wave.

To assess the impact of these acoustic disturbances we set the microscope up in ADF-STEM mode and stopped the beam on the midpoint of an edge of a gold particle. (Placing the beam on the side of an atom column if an atomic resolution image can be formed works as well – this was used to obtain the spectra in fig. 4). If there is no noise pickup in the microscope or its scanning system the beam should remain stationary and the ADF photomultiplier signal should be constant. Any slow drift can be corrected from observing the Ronchigram. However, any noise source will shake the beam, causing the signal to rise and fall as the beam moves on and off the edge of the particle. By feeding the ADF signal into a signal-averaging spectrum analyzer a complete noise spectrum can be built up. Typically a hundred or so spectra need to be averaged together to give a clear picture of the noise. Detector noise can be distinguished by defocusing the beam so it is no longer sensitive to changes in position. This signal is only proportional to the beam deflection. For an absolute calibration we use the results of the previous section to scale the noise peak at 180 Hz which is almost solely due to EMI interference. Figure 4c shows the noise in the ADF signal before and after we replaced the fans on the computer with low-noise PC fans. The old fans excited a mechanical resonance in the microscope around 350 Hz. The new fans do not, and general reduce the other harmonics as well.

Acoustic Remediation

Figure 4b shows that the microscope was also sensitive to acoustic noise at 60 Hz and below. Acoustic shielding at these low frequencies is difficult. Conventional sound damping material made from polyurethane or other foams are almost completely ineffective in the 0-125 Hz band. To get some feeling for the lengthscales involved, consider that a 30 Hz sound wave will have a wavelength of about 10 m, about the size of a larger microscope room. Rather than thinking of sound waves bouncing off walls and following well-defined geometric rays, it is more useful to think of the room as a resonant cavity. The fixed walls of the room force the air velocity to zero and the pressure fluctuations to a maximum at the walls. The pressure fluctuations will drive volume changes in objects in the room (like the microscope). However these volume changes are adiabatic at audio frequencies and intensities –i.e. heat cannot be transferred out of the wave by compression and expansion of the air [12]. Another mechanism is needed for attenuation. For porous materials such as fiberglass, the sound wave's kinetic energy is converted to frictional heat as fibers are set in motion (see chapter 9 of ref[13] for a more detailed discussion). Since the sound wave's kinetic energy is proportional to the square instantaneous local air velocity, most of the sound's kinetic energy is peaked somewhere in the middle of the room – where the microscope is. Placing acoustic damping materials on the wall also places it at velocity nodes (and hence kinetic energy minima) of the sound wave, where it is least effective in absorbing acoustic energy. The recommended practice for low-frequency sound absorption is to leave a gap between the damping material and the wall[14]. Even leaving a 6 inch gap between the sound damp and the wall has a noticeable effect.

Since the wavelength of low frequency sounds is so much larger than any damping material, the shape and pattern of damping material is not too critical. Fiberglass proves to be very efficient in absorbing these sounds. Fiberglass acoustic banners are often used to deaden noise in large spaces like gymnasiums and factories. Consequently they tend to be much cheaper than the eggshell foams used to damp high frequencies in recording studios or the panels used in office space. We used Alphaflex 4" ripstop nylon banners (10x4) acoustic banners from Acoustical Solutions (www.acousticalsolutions.com) and hung them 6 inches off the walls and in the middle of the room off the ceiling (figure 5). The banners do a good job at low frequencies, damping noise from motors, chillers and AC equipment (<100 Hz), but there are better materials if higher frequencies (such as from computer fans) are the problem.

A very rough rule of thumb is that side entry stages will pick up about 0.1 Å at 40 dBC and 0.3 Å at 50 dBC noise level, although this will vary considerably depending on the noise source. Or put another way, if you can hear it, and it sounds loud, the microscope probably feels the same way. In the quasi-static limit, pressure changes from doors opening in air-conditioned buildings or storm fronts approaching can cause drifts of 1 Å /Pa[6].

Temperature Control

Poor temperature control does not add scan noise but rather produces long term drifts to imaging and spectroscopy. However drafts from air inlets can cause serious distortions to STEM images. These tend to be turbulent and not at a single frequency so are hard to spot from a spectrum analyzer. In STEM images, their effects are most noticeable at low frequencies (10 Hz and below), producing random deflections – especially line to line. The microscope's vibration isolation usually has a resonance frequency of a few Hz so it is especially sensitive to air movements. Consider a room where the air conditioning system is producing 50 dB of noise – a fairly quiet room. This corresponds to a pressure of 6 mPa. The microscope has a cross-sectional area of about 1 m² so the force on the column is 6 mN. We can use Hooke's law ($F=-kx$) to estimate the displacement of the column: With a resonance frequency of 5 Hz and a mass of ~1000 kg, the spring constant of a microscope is $k = m\omega^2 \approx 10^6$ N/m. The quasi-static displacement of the column is then $x \sim 6 \times 10^{-9}$ m or 6 nm. The actual impact is fortunately attenuated when the stage can move in phase with the column, nevertheless this argument does demonstrate the vulnerability of a seemingly immovable object to a tiny breeze. (We checked this with an accelerometer and the column itself does indeed move detectably when people talk or blow on it). Air flow at the column should not exceed 30 feet/minute and ideally be less than 15 feet per minute. This can be checked with the "toilet-paper test" [6]: Take a single-ply strip of toilet paper, cut it 1 foot long and 1/8 inch wide sections. Decorate the room. If the strips deflect by more than an inch at the bottom, the air flow exceeds 20 feet/minute.

The first priority in designing an air handling system should be to minimize air movement in the room. Forced air systems remove all heat from the room by convection and conduction. However the heat capacity of air is very low, require large air flows to

remove large heat loads (see reference [6] for air flow calculations). Whenever possible, as much of the heat generating equipment such as power distribution racks should be kept out of the room. Next, the air into the room should be diffused as much as possible. A false ceiling with multiple perforations works, but is expensive to retrofit. A more effective and cheaper solution is to add a duct sock to the air inlet. This is essentially a nylon stocking where the air diffuses out uniformly along the length of the sock through weave in the fabric. These socks also reduce the air flow into the room and must be sealed tightly to the inlet or air can escape with a loud whistling sound. We have used duct socks from www.ductsox.com (usually 20-30 feet of the Stat-X low-thro model). This is an easy retrofit and often cheaper than sheetmetal ductwork in the first place.

The less heat that has to be removed by air movement, the more stable the room. We have found that radiant cooling is an effective (and often the cheapest) method of controlling the room temperature or at least add thermal mass to the room. This can be as simple as a large surface-area radiator on the wall with building chilled water flowing through it. If this removes most of the heat load, then the existing forced-air system can be slowed down, and used mostly to regulate humidity (which radiant cooling cannot). More sophisticated systems are described by Y. Roulet et al. [10]. These can regulate the temperature to better than 0.1 °C, and as most of the cooling is by radiation, the return to equilibrium is rapid. Figure 5 shows the radiant cooling panels, from Energy Solaire, that we have used in our microscope room designs (both Bell Labs in 2002 and Cornell in 2004). A typical system will use 10-20 cooling panels (each with an area of 2 m²) fed by an old microscope chiller. Figure 6 shows the effect on room temperature stability, with and without a radiant cooling system added to our microscope room at Cornell. The key was tuning the water temperature into the range that the building AC system was no longer switching on the heating or cooling coils. We have to adjust the water temperature once in spring, and again in the fall. We are currently designing a controller to provide active feedback from the room temperature instead of the water temperature to the system. Even without room temperature feedback, the stability over a week can be 0.1 F or better.

The benefits of the radiant cooling system are reduced drift for both imaging and spectroscopy as the spectrometer and high tension supply are sensitive to temperature changes. Figure 7 shows one additional benefit of a stable room: frame averaging. Instabilities – especially air and pressure changes – cause local bend and distortions in STEM lattice images. Once these instabilities are reduced below about a fifth to a tenth of lattice spacing, correlating and adding successively recorded images becomes a practical method to increase signal to noise and average out the remaining scan noises. As frame averaging trades off resolution for signal, it is only practical in a quiet environment.

Summary

We have described some common sources of environmental noise and presented strategies to identify and remediate these problems in a cost-effective manner. For instance, how low should the external magnetic fields in the room be made? A serious

consideration when a shielded room could cost up to \$300,000. For most microscopes, we have measured the beam deflection to be $0.5 \text{ \AA} / \text{mG}$ of AC field at 60 Hz. Typically such instruments produce roughly 0.1 mG p-p (0.03 mG r.m.s) of AC noise from their own internal electronics and pumps suggesting that until substantial redesigns are made, 0.1 - 0.2 mG p-p is a reasonable limit for external AC fields.

For post-column EELS spectrometers, the sensitivity is around 1 eV/mG suggesting 0.1 eV stability is achievable in a quiet room. Microscope rooms should be at least 50 feet from roads, loading docks, elevators and other sources of quasi-DC magnetic fields. We found side-entry stages are sensitive to air pressure changes and acoustic pickup, especially at stage resonances. Roughly 0.1 \AA distortions result from 40 dBC noise levels and 0.3 \AA at 50 dBC. Air pressure changes can cause image deflections as large as 1 \AA per Pa, but this does depend on the stage design.

Acknowledgements

Support for this work was provided by the Cornell Center for Materials Research, an NSF MRSEC, and NSF grant # DMR-0417392 for the acquisition of the high resolution spectrometer. Helpful discussions with Mohammad Daraei of FEI on column and stage resonances are acknowledged.

References

- [1] E. Ungar, D. H. Sturz, H. Amick, *Sound and Vibration* **24**, 20 (1990).
- [2] J. H. Turner, M. A. O'Keefe, R. Mueller, in *Proc. Microsc. Microanal.*, edited by G. Bailey (San Francisco Press, 1997), Vol. 3, p. 1177.
- [3] M. A. O'Keefe, *et al.*, *Microscopy Today* **12**, 8 (2004).
- [4] C. E. Brown, *et al.*, *Microscopy Today* **12**, 16 (2004).
- [5] R. Anderson, in *Practical Methods in Electron Microscopy*, edited by A. M. Glauert (North-Holland, Amsterdam, 1975), Vol. 4, p. 1.
- [6] D. A. Muller, J. Grazul, *J. Elec. Microsc.* **50**, 219 (2001).
- [7] C. J. D. Hetherington, *et al.*, in *Mat. Res. Soc. Symp. Proc.* (MRS, 1998), Vol. 523, p. 171.
- [8] H. Amick, *Journal Of The Institute Of Environmental Sciences* **40**, 35 (1997).
- [9] H. Amick, *et al.*, in *Proceedings of SPIE: Buildings for Nanoscale Research and Beyond* (SPIE, San Diego, 2005), Vol. 5933, p. 1.
- [10] Y. Roulet, *et al.*, *Energy and Buildings* **30**, 121 (1999).
- [11] D. H. Staelin, A. W. Morgenthaler, J. A. Kong, *Electromagnetic Waves* (Prentice Hall, NJ, 1998).
- [12] M. W. Zemansky, R. H. Dittman, *Heat and Thermodynamics*, 6th ed. (McGraw-Hill, NY, 1987).
- [13] F. A. Everest, *Master Handbook of Acoustics*, 4th ed. (McGraw-Hill, NY, 2001).
- [14] *Noise Control: A guide for workers and employers*, Occupational Safety and Health Administration, U.S. Department of Labor, (Washington, DC, 1995), p. 63.

Figures.

Figure 1. The effect of a modest AC field on an ADF-STEM image of SrTiO₃ recorded on a JEOL 2010F. (a) The image is recorded without any synchronization to the external field, leading to a random tearing of the atoms. (b) External synchronization is enabled so that each scan line begins at the same point in the AC cycle. The result is a periodic contraction and expansion of the lattice. (c) External synchronization is enabled, but the mains frequency of the synchronization signal (AC to the scope through a UPS at ~59.9 Hz) is slightly different from the frequency of the AC noise, in this case the building mains at 60 Hz. The result is a beating at the difference of the 2 frequencies leading to an apparent bending of the lattice, in addition to the periodic distortions. All three conditions lead to a loss of spatial resolution in EELS where the acquisition time is longer than the mains period. The only solution is to locate and reduce the external field.

Figure 2. Calibration of the AC-field sensitivity by applying a large external AC field to a known sample. (a) The test sample of 5 unit cells of SrTiO₃ (1.96 nm thick) grown on a silicon substrate imaged in a 200 kV, monochromated Tecnai T20 before the external field is applied. (b) The same sample imaged with a 34 mG peak to peak external field applied. The image is synchronized to the same mains frequency as the field. These are 512 x 512 images recorded at nominally 64 μ sec/pixel dwell time.

Figure 3. Simulation of the effect of AC noise on the x-scan for Annular dark field STEM images of [110] Silicon using the field sensitivities determined from figure 2. (a) no noise, (b) 0.2 Å p-p (0.15 mG r.m.s), (c) 0.4 Å p-p (0.3 mG r.m.s), (d) 1 Å p-p (0.7 mG r.m.s.) (e) 2 Å p-p (f) 2 Å p-p in both the x and y scan directions. The imaging conditions are assumed to be 200 kV, C_s=0.5 mm, 10.5 mrad objective and 50 mrad ADF inner angle at optimal defocus.

Figure 4. Troubleshooting noise sources from their spectral fingerprints. (a) Mechanical vibration spectra for an accelerometer placed on the floor and the column of the microscope showing the noise from 200-400 Hz is not coming through the floor. (b) A sound meter shows that the computer fans produce a noticeable noise component in this frequency range. (c) A spectrum analyzer connected to the ADF photomultiplier preamp output, as described in the text, shows the reduction in scan noise when the computer fans were replaced with quieter ones.

Figure 5. Photograph of the STEM room at Bell Labs circa 2002. Fiberglass acoustic banners are hung ~6 inches off the wall and behind the radiant cooling panels. When filled with water, the cooling panels are rather poor sound reflectors. The air supply to the room is connected to a duct sock which diffuses air along its entire length, rather than in drafts as with vented supplies.

Figure 6. Room temperature recorded in the STEM room (a) with the radiant cooling panels off and (b) the panels on and water temperature adjusted so that the building AC system hot and cold water valves are closed.

Figure 7. High-Angle annular dark field lattice images of SrTiO₃ recorded on our monochromated Tecnai-T20 at 200 kV with a 40 mrad collection angle, and 9.6 mrad incident angle. The bright atoms are Sr, and the fainter ones are Ti. (a) at 32 microseconds per pixel, (b) The average of 10 cross-correlated images, each recorded at 32 microseconds per pixel. Both images are 33 Å full scale.

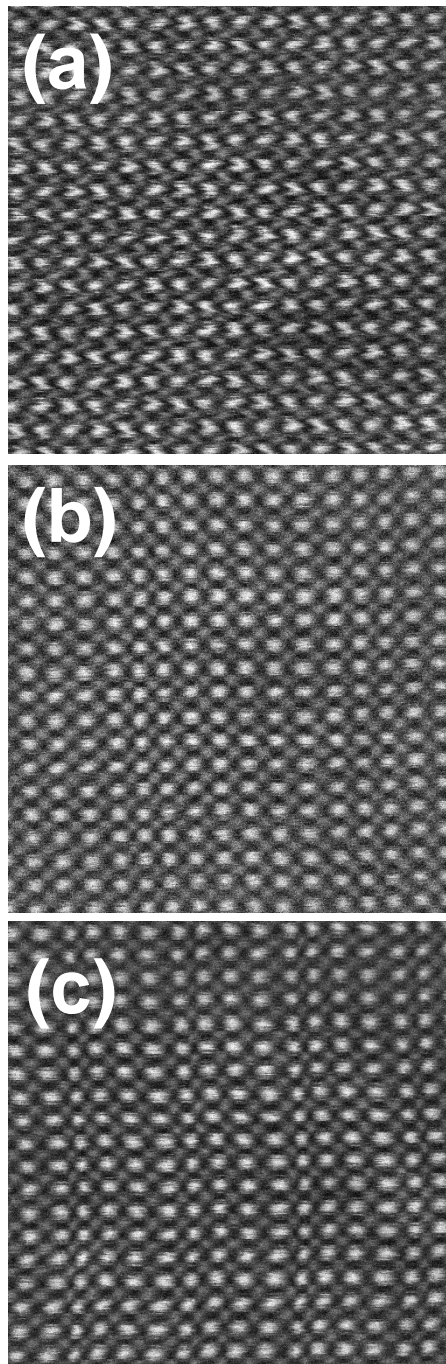


Figure 1. Muller et al

The effect of a modest AC field on an ADF-STEM image of SrTiO_3 . (a) The image is recorded without any synchronization to the external field, leading to a random tearing of the atoms. (b) External synchronization is enabled so that each scan line begins at the same point in the AC cycle. The result is a periodic contraction and expansion of the lattice. (c) External synchronization is enabled, but the mains frequency of the synchronization signal (AC to the scope through a UPS at ~ 59.9 Hz) is slightly different from the frequency of the AC noise, in this case the building mains at 60 Hz. The result is a beating at the difference of the 2 frequencies leading to an apparent bending of the lattice, in addition to the periodic distortions. All three conditions lead to a loss of resolution in EELS where the acquisition time is longer than the mains period.

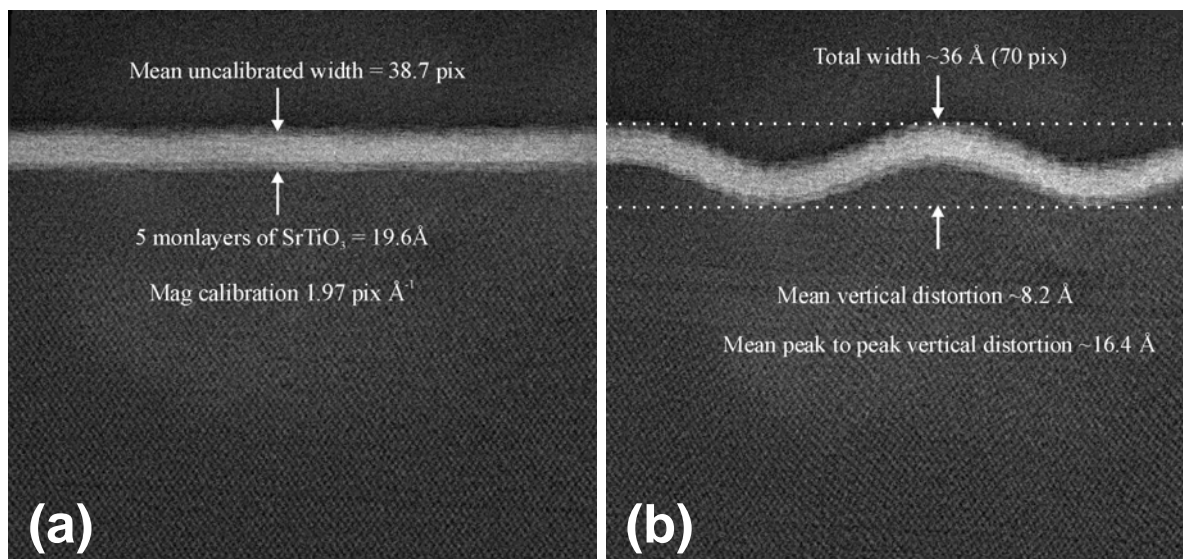


Figure 2. Muller et al

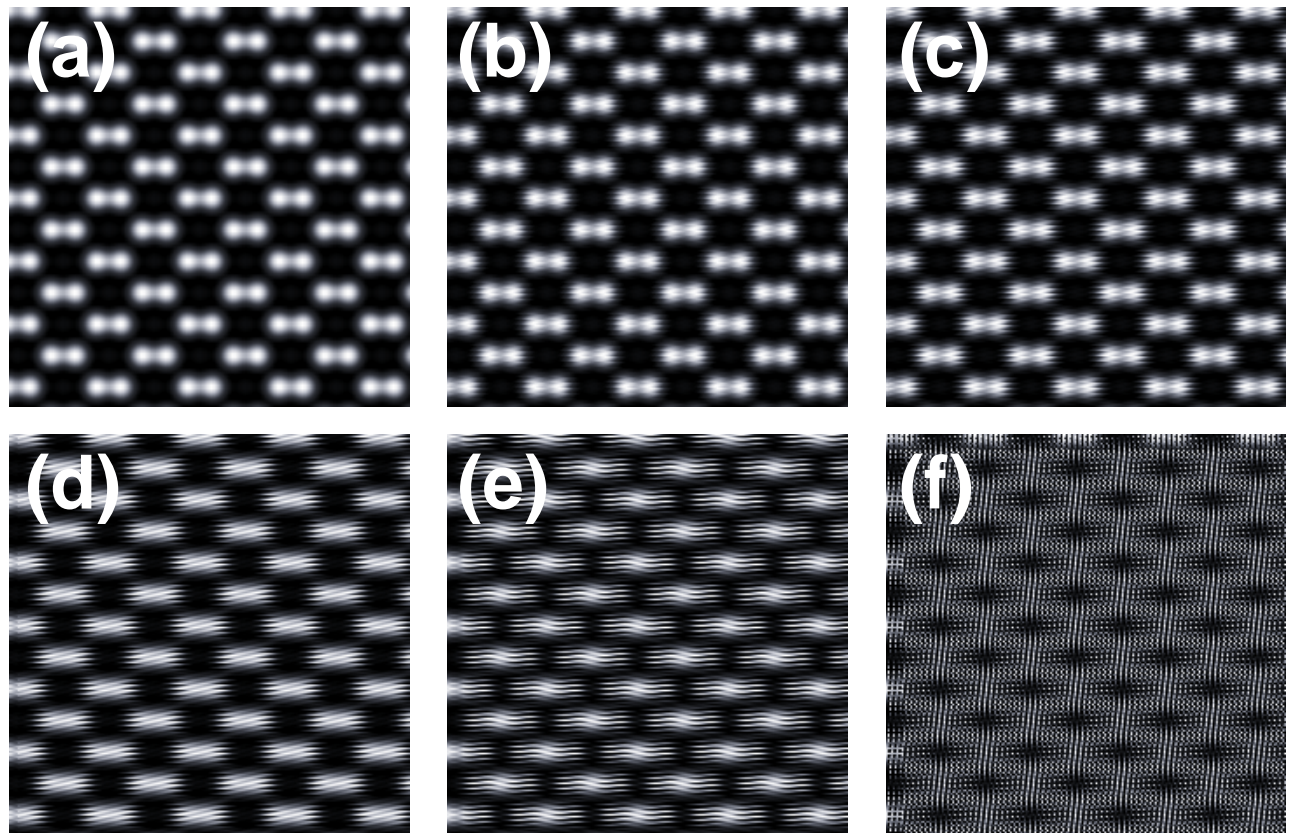


Figure 3. Muller et al.

Simulation of the effect of AC noise on the x-scan for Annular dark field STEM images of $[110]$ Silicon. (a) no noise, (b) 0.2\AA p-p (0.15 mG r.m.s), (c) 0.4\AA p-p (0.3 mG r.m.s.) (d) 1\AA p-p (0.7 mG r.m.s.) (e) 2\AA p-p (f) 2\AA p-p in both the x and y scan directions.

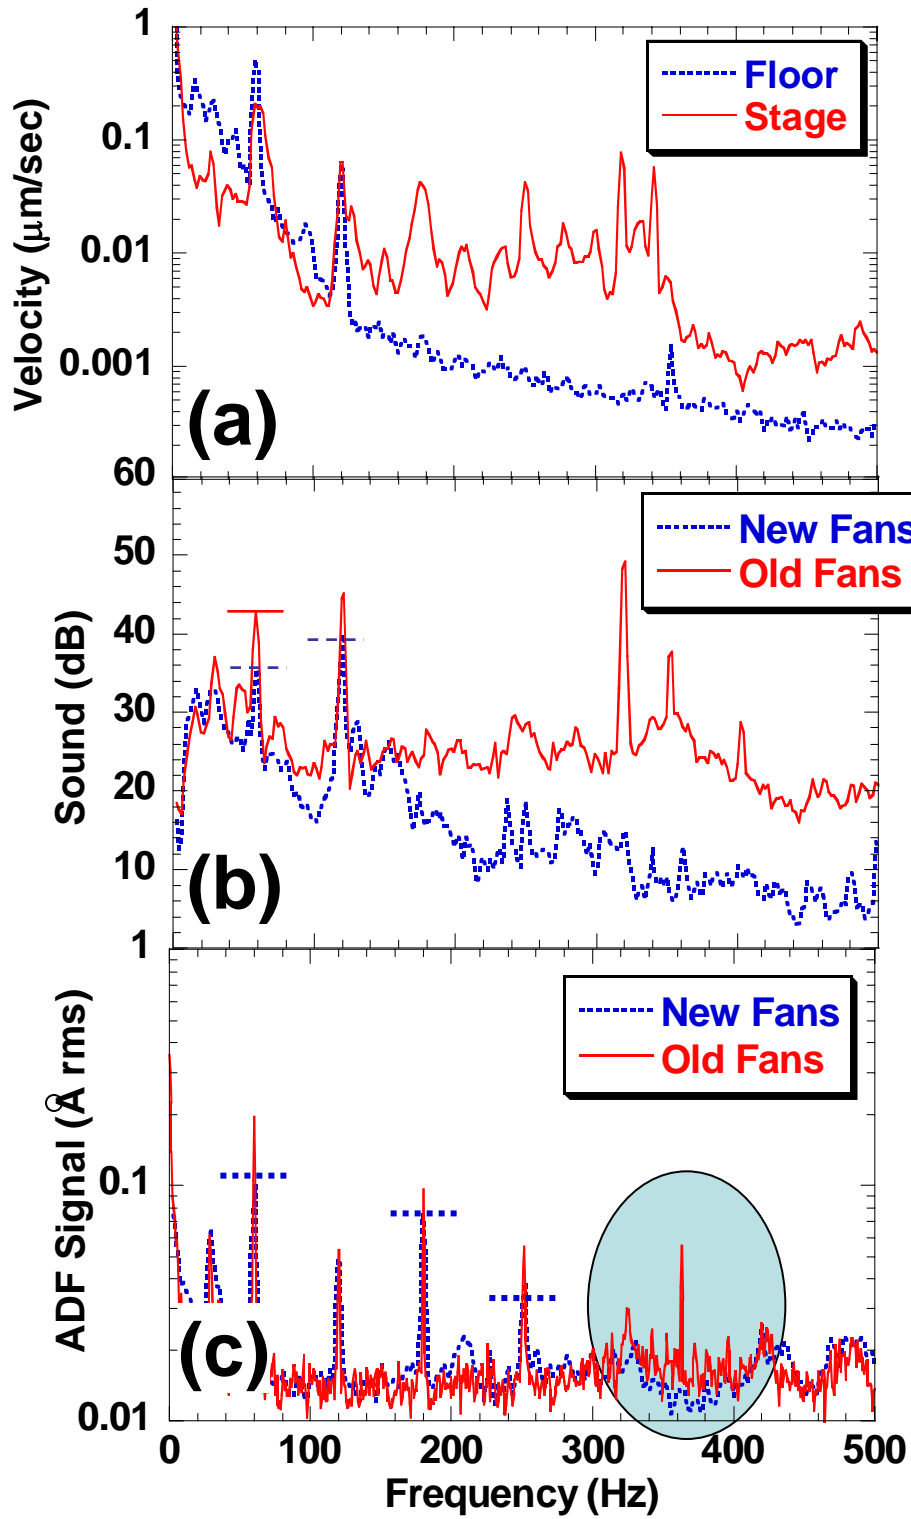


Figure 4. Muller et al



Figure 5. Muller et al

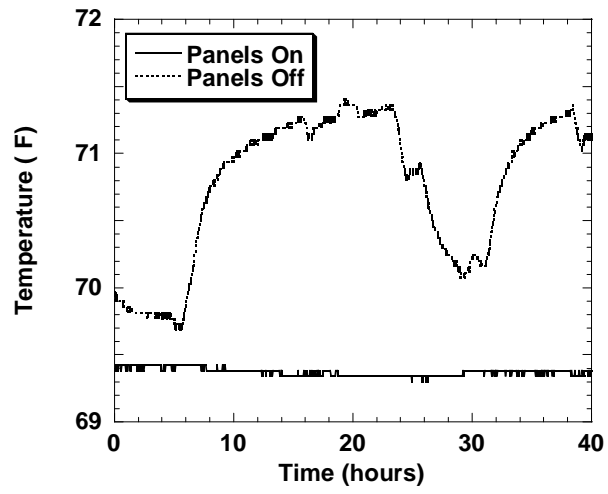


Figure 6. Muller et al

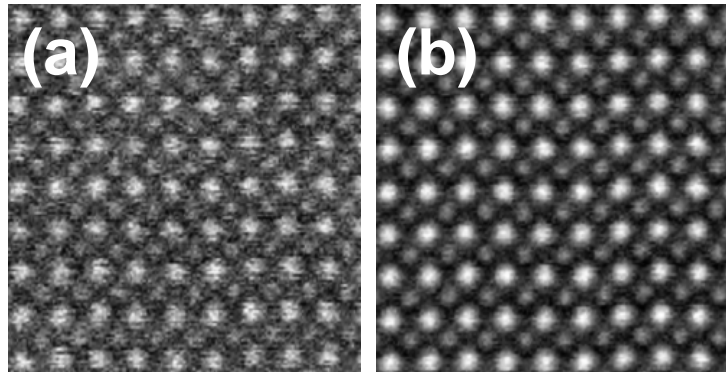


Figure 7. Muller et al